


How to install thermal fuses (firebreaks)

1. Firmly connect oxygen tubing connectors to both ends of the device.
2. Check that gas flows freely through the Firesafe™ Cannula Valve and that there are no leaks.

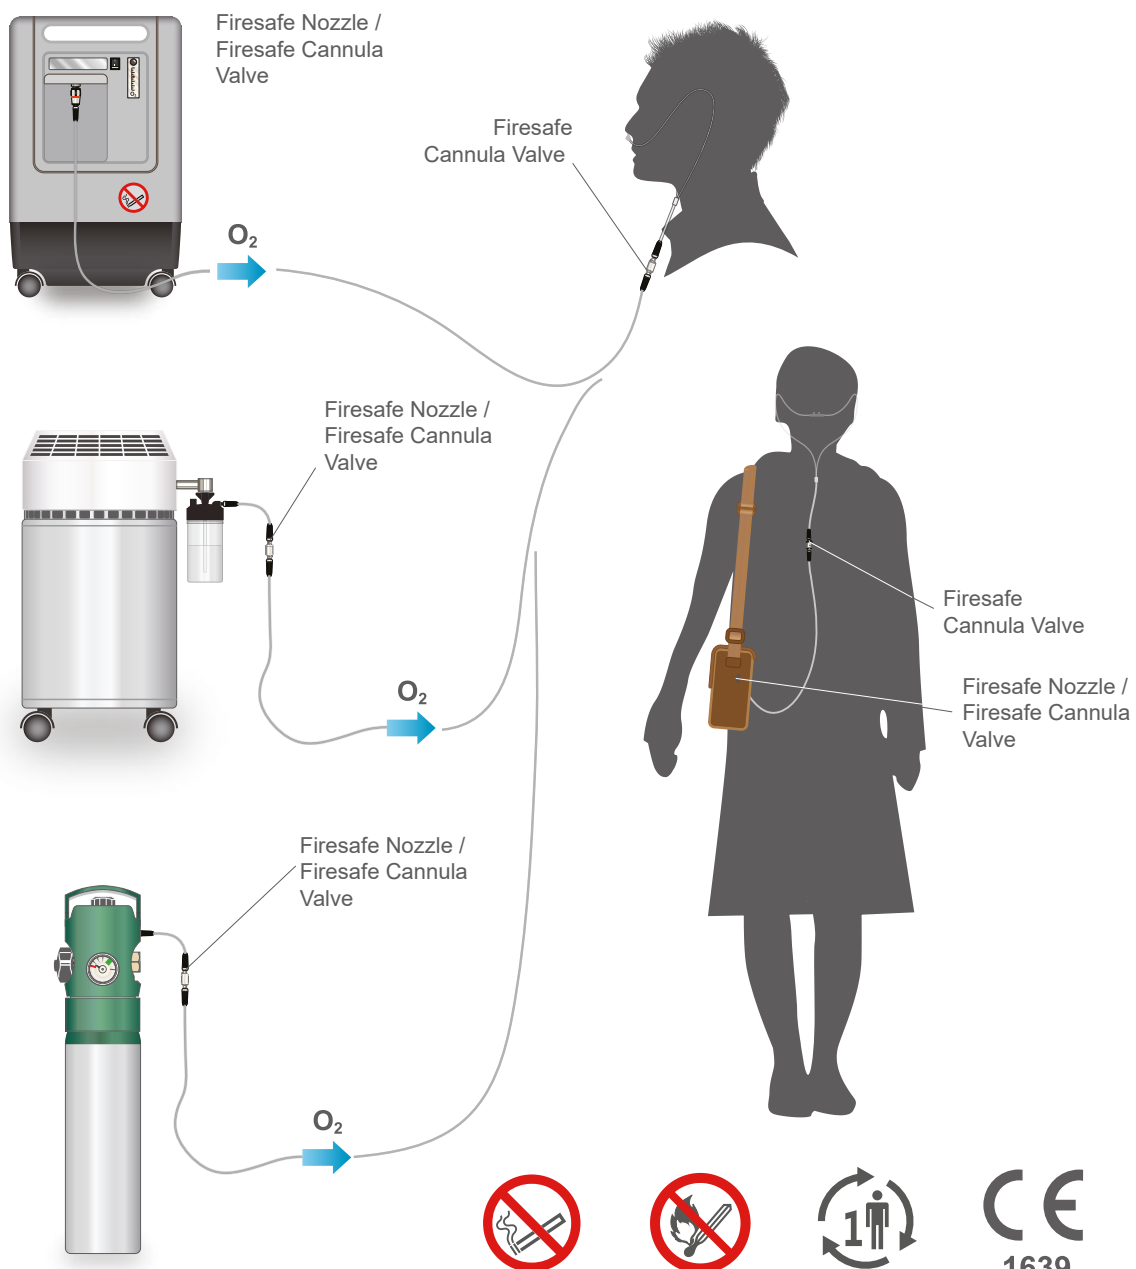

Where to order

Firebreaks can be ordered from BPR Medical's US distributors:

Applied Home Healthcare Equipment

28825 Ranney Parkway
Westlake, OH 44145

t: 1-888-327-7301 (Toll Free)
e: sales@applied-inc.com
w: www.applied-inc.com

Sunset Healthcare Solutions

180 N Michigan Ave Ste 2000
Chicago, IL 60601

t: 1-312-997-9980
e: sales@sunsethcs.com
w: www.SunsetHCS.com

More information

Watch our video about the impact and prevalence of home oxygen fires – and how thermal fuses work.



More information can also be found on the www.firebreaks.info website.

Or contact:

Ian Buckle

t: +44 (0) 7841 689824
e: ian.buckle@bprmedical.com

Sara Foy

t: +1 661 332 4166 (USA)
e: sara.foy@bprmedical.com